 


Wi-Fi Over-Under Voltage Protector Energy Meter

User Manual



- Remote control
- Voice control
- Timing schedule
- Electricity metering
- Over/Under voltage protection
- Residual Current (leakage) protection
- Device sharing



Image corresponding table parameters

(● Indicates that this function is available) (○ Indicates that this function is not available)


2P WTDZW-C 63A	2P WTDZW-G 63A	2P WTDZW-J 63A	2P WTDZW-63A	2P WTDZW-B 63A	4P RMDZT-GF 7/4P 100A	2P WTDZW-D 63A	Function	
●	●	●	●	●	●	●	ON/OFF、Timing	1. Four timing modes: timing mode/countdown mode/cycle timing/jog switch (30 sets of timing settings)
○	●	●	●	●	●	●	Reclosing	2. Automatic re-closer (ON/OFF)
○	○	●	●	●	●	●	Metering (Prepaid function)	3. View the electricity input from photovoltaic power generation to the State Grid * The APP can view the electricity generation input to the State Grid at the time, day, month, and year (Prepaid function)
○	●	●	●	●	●	●	under voltage (adjustable)	4. Under voltage protection 80V-210V (adjustable) (default: 175V) (this parameter is only set on the App) (ON/OFF)
○	●	●	●	●	●	●	Over voltage (adjustable)	5. Overvoltage protection 120V-300V (adjustable) (default: 275) (this parameter is only set on the App)
○	○	○	●	○	○	○	Over current (adjustable)	6. Overcurrent protection 1A-63A (accuracy A) (adjustable) (default: 63A) (this parameter is only set on the App) (ON/OFF)
○	○	○	○	●	○	○	Over current (adjustable)	6. Overcurrent protection 1.0A-63A (accuracy 0.1A) (adjustable) (default: 63A) (this parameter is only set on the App) (ON/OFF)
○	○	○	○	○	●	●	Over current (adjustable)	7. Overcurrent protection 1.0A-100A (accuracy 0.1A) (adjustable) (default: 100A) (this parameter is only set on the App) (ON/OFF)
○	●	●	●	●	●	●	Reclosing time (adjustable)	8. Reconnection time (delay time): 10s-99s (default: 30s) (this parameter is only set on the App) (ON/OFF)
○	●	●	●	●	●	●	Reclosing times (adjustable)	9. Overcurrent and leakage protection time: 1-30 off (default value: 5) This function can be turned off (this parameter is only set on the App) (ON/OFF)
○	○	○	●	●	●	●	Photovoltaic bidirectional metering	10. View the electricity input from photovoltaic power generation to the State Grid * The APP can view the electricity generation input to the State Grid at the time, day, month, and year
○	○	○	○	○	○	●	Leakage current (adjustable)	*11. Leakage protection: 10-99mA (default: 50mA), this function can be turned off (this parameter is only set on the App) (ON/OFF)
○	●	●	●	●	●	●	Temperature (adjustable)	12. Over temperature protection: 10-85 (this parameter is only set on the App) (ON/OFF)
○	○	○	○	○	○	●	Over current delay (adjustable)	13. Over current delay (adjustable) (delay time): 1s-15s (default: 1s) (this parameter is only set on the App) (ON/OFF)
○	○	○	○	○	○	●	Loss of current delay (adjustable)	14. Loss of current delay (adjustable) (delay time): 1s-15s (default: 1s) (this parameter is only set on the App) (ON/OFF)

Remote control can be turned on/off by phone from anywhere at anytime. Review current, power, voltage, leakage current, temperature, number of faults, total battery capacity, and recharge capacity on your phone. You can set overvoltage/undervoltage/overcurrent/leakage current in the application, or you can set the following parameters in Protector .

* You can set overvoltage/undervoltage/overcurrent/leakage current in the application, or you can set the following parameters in Protector -

Remote control can be turned on/off by phone from anywhere at anytime. Review current, power, voltage, leakage current, temperature, number of faults, total battery capacity, and recharge capacity on your phone. You can set overvoltage/undervoltage/overcurrent/leakage current in the application, or you can set the following parameters in Protector .

PRODUCT DIMENLION

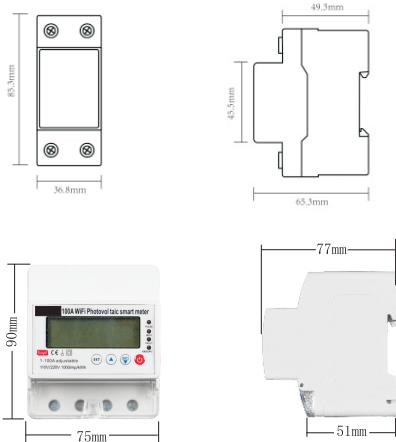

HOW TO ADD DEVICE TO APP

1. Use Your smart phone to scan QR codes, or search "smart Life""Tuya Smart"app in Google play or APP store to download and install
2. Create an account with your mobile number
3. Connect you mobile to your wi-fi router. Click "+" in the upper right corner of homepage or click "Add device" then select breaker "Switch module(Wi-Fi)" from "Energy", long press WIFI button for 5 seconds, after see quick flash, open app to pair



PROOUCT PARAMETERS

Rated Supply Voltage: AC 230V Operation Voltage Range: AC 80V-400V (single phase)
 Rated Frequency: 50/60Hz Electric Current(>A) 1-63A
 Setting Range:

Over Voltage(>U) 120-300V Under Voltage(<u) 80-210V
 Setting Range: (adjustable) Setting Range: (adjustable)

Electric Leakage 10-99mA off
 Protection: (This feature can be tuned off) >U and <Trip Delay: 0.5s

Over Current And Leakage Protect Times :1-30 Off
 Reset/Start Delay: 10s-99s Power Display Range: 0-99999.9kw/h
 operating Temperature: -30°C to 70°C

